

MONECA Water Station



- Pre-paid water station
- Backflow Protection
- Control of water volume

MONECA Water Station Specifications



Minimum working pressure : 100 kPa

Maximum working pressure : 1000 kPa

Inlet : Flange DN80 AS4087

Outlet : 65 mm diameter MFB, CFA, FBT, QRT
and Storz outlet fittings

Maximum flow : 45 m³/h

Operating Temperature (range) : -5°C to 70°C

MONECA Water Station Internal



How does the Moneca operate?



- 1/ Place User Card on Moneca [lift the black flap]
- 2/ Attach hose [lift the grey flap]
- 3/ Press “BLACK BUTTON” to start [push again to increase flow]
- 4/ Press “RED BUTTON” to decrease flow [continual pushing will stop flow]
- 5/ Take User Card from Moneca to stop flow.
- 6/ Un-hook your hose

The screen will show the water meter deducting the volume from the card.

Typical filling station layout



MONECA Water Station Complete Backflow Protection



MONECA Water Station



Simple to use!!!